

## IMPORTANT - READ FIRST!

Before you read this manual, take the time to read and understand your Glock™ owners manual. This firearm is a dangerous weapon; it is therefore potentially lethal!

**If the handgun is resold, this safety manual must accompany the weapon.**

Thoroughly read this manual and all installation instructions, operations and precautions pertaining to the accessories you have just purchased for your Glock® pistol before installing or using Aro-Tek Ltd, accessories.

**WARNING:** When you squeeze the trigger you must expect the gun to fire, and you must take full responsibility for firing it. Your care can avoid accidental discharge and you will therefore avoid accidental injury or death.

**WARNING:**  
**If this firearm is carelessly or improperly handled, unintentional discharge could result in injury, damage to property, or death.**

- ARO-TEK™ Guide Tube Kits
- ARO-TEK™ Trigger Kits
- SURE-TOUCH™ Magazine Release
- SURE-TOUCH™ Slide Release
- DUAL-DOT™ Front Sights
- ARO-GLOW™ Front Sights
- ARO-SITE™ Ghost Ring Sights
- ARO-SITE™ Night Sights
- ARO-SITE™ Rear Sights

## INSTALLATION & USER GUIDE



ARO-TEK, LTD



Aro-Tek, Ltd.  
PO Box 14937 • Tumwater, WA 98511-4937  
888.827.6835 • fax 360.350.0185  
arotek@arotek.com • [www.arotek.com](http://www.arotek.com)

## ARO-SITE™ Sights for the Demanding Shooter

### GHOST RING SIGHTS



**Ghost Ring Sites**  
Work just like a scope



**ARO-SITE™**  
Sight Set with  
Ghost Ring Rear and  
**ARO-GLOW™** Front



**ARO-SITE™**  
Ghost Ring Night Sight Set



**ARO-SITE™**  
Ghost Ring Set with  
**ARO-GLOW™** Front

### ARO-SITE™

All **ARO-SITE™** Rear Sights (except Ghost Ring) can be used with stock-height front sights.



**ARO-SITE™**  
3 Dot Sight Set



**ARO-SITE™**  
Rear Night Sight



**ARO-SITE™**  
2 Dot Rear Sight



**ARO-SITE™**  
Low Profile  
Night Sight Set



**ARO-SITE™**  
Target Rear Sight



**ARO-SITE™**  
Standard Rear  
Sights Available  
with White Dots,  
Luminescent Dots,  
or Tritium  
Night Sights



Thin Serrated  
Front Sights for  
**Standard** or  
**Ghost Ring Sites**  
.165" to .350 Height



**ARO-SITE™**  
Serrated  
Front Sight



**ARO-SITE™**  
Front Dot Sight,  
Luminescent Green  
or White Dot



### DUAL DOT® SIGHTS



**DUAL-DOT™**

 
Front Sights for use with Standard or Ghost Ring Rear Sights



**NEW!**



**DUAL-DOT™**

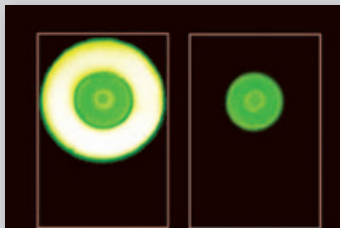

**NIGHT VIEW**  
Tritium Dot w/ Luminescent Ring  
-vs-  
Tritium Dot Only

Glow time of Luminescent Ring on **DUAL-DOT™** Tritium Night Sight after 15 second charge with a 3 D-Cell LED MAG-LITE® at six inches.

0 sec. 30 sec. 60 sec. 2 min. 3 min. 4 min. 5 min. 6 min. 7 min. 8 min. 9 min. 10 min.

 
Glow time will increase with sun light or longer charge time.



Front Tritium Night Sight. White, Orange, or Luminescent Ring



**DUAL-DOT™**  
Orange Center  
with White Ring

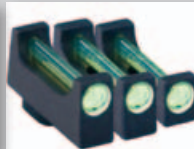


**DUAL-DOT™**  
White Dot Front Sight with Red or Green  
**ARO-GLOW™** Center




### ARO-GLOW™



 **ARO-GLOW™**  
Front Sights

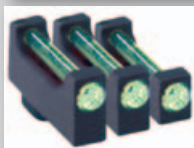

 Green or Red  
.115" or .130"  
Width  
.165" to .240  
Heights

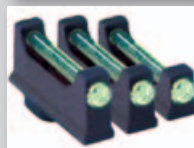

**All Sites Include Installation Tools**

## Competition Accessories



**SURE TOUCH™**  
Wrap-Around  
Magazine Release  
Black or Chrome



**DROP-IN**  
Magazine Release  
Stock or Extended  
Black or Chrome



**ARO-TEK™**  
Competition and Tactical  
Trigger Kits Polished 3.5#, 5#  
or 8#  
Connector, Firing Pin,  
Firing Pin Safety



**ARO-TEK™**  
Connector  
3.5#, 5#, or 8#, Polished  
and Diamond Plated



 
**ARO-TEK™**  
Chrome Dress Up Kit: Trig-  
ger Pin  
Locking Block Pin  
Slide Lock



**SURE TOUCH™**  
Extended Slide Release  
Black or Chrome



**ARO-TEK™**  
Guide Tube Kit  
with removable tip  
and wrench.  
Titanium or Stainless.  
Available non-captured.

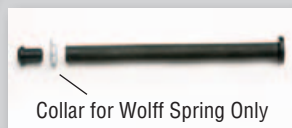

**ARO-TEK™**  
Titanium Guide Tube Kit  
(without spring)



**ARO-TEK™**  
Titanium Guide Tube for  
Subcompact Glock®



**ARO-TEK™**  
Ultra-Competition  
Guide Tube Kit  
Diamond coated, mirror pol-  
ished, heat treated stainless  
steel, with  
removable tip and wrench

## LIABILITY RELEASE

Warranty of these products is limited to replacement due to manufacturing defects. Installation may require fitting which should be done by an experienced gunsmith. We are not responsible for any damage, injury, or other loss due to improper installation or misuse of this product. Installation of our products does not affect the manufacturer's warranty. It is highly recommended that the handgun be completely inspected for safety and operation by a competent gunsmith before use.

© Copyright 1998 Aro-Tek, Ltd.  
Glock® is a registered trademark of Glock® Inc. Smyrna, GA



**Aro-Tek, Ltd.**

PO Box 14937  
Tumwater, WA 98511-4937  
888.827.6835  
fax 360.350.0185  
arotek@arotek.com  
[www.arotek.com](http://www.arotek.com)

## Tools, Tool Kits, Cases



**ARO-TEK™**  
Armorer's Tools, Kits  
and Cases:  
3/32 Pin Punch  
3/16 Nut Driver  
.050 Allen Screw Driver



**ARO-TEK™**  
3/16 Nut Driver  
Included with  
Front Sites  
.050 Allen Wrench  
Included with  
Rear Sights

**ARO-TEK™**  
**Guarantee**

**"If it Breaks,  
We'll  
Replace it"**





## SURE-TOUCH™ Slide Release

**Aro-Tek's Extended Slide Release** greatly increases leverage and thumb access for easy, quick, unloading and reloading. Sure-Touch Slide Release must be installed according to these instructions. It is recommended that the slide release be installed by a qualified gunsmith or Glock® armorer.

### Assembly Instructions

1. Remove Slide.
2. Squeeze trigger back to fired position.
3. Grip slide release with left thumb and forefinger (figure 1).

5. Slide the trigger pin out far enough to expose a groove in the pin. Do not fully remove the pin.
6. Remove the old slide release.
7. Insert the Sure-Touch™ Slide Release into the handle (figure 2), pressing the trigger pin inward until it is flush on both sides.

**WARNING**  
The slide release, when operated, will permit the slide to move forward and chamber a cartridge.

Figure 1


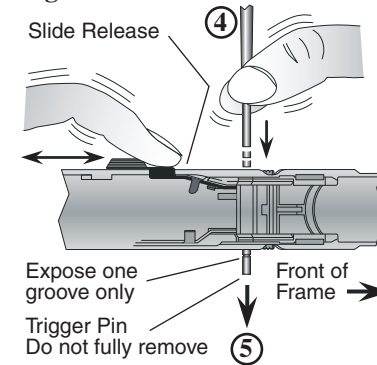


Figure 2

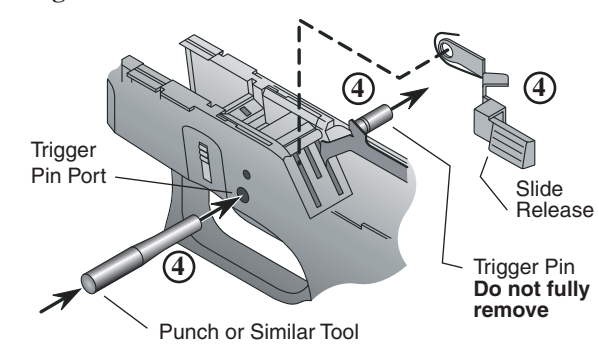

## +2 Magazine Extension

### Installation:

1. Remove floorplate from base of magazine by pushing in detent in the baseplate with takedown tool. While squeezing sides of magazine, slide the baseplate forward.
2. Compress magazine spring and slide magazine extension into magazine. Make sure spring is contained by extension.
3. Magazine extensions should fit snugly. If there is movement, then the extension does not fit properly.


## Titanium Guide Tube

**Aro-Tek's Titanium Guide Tube** replaces the standard plastic guide tube without added weight for greater strength and smoother action. It must be installed according to these instructions. It is recommended that the spring guide be installed by a qualified gunsmith or Glock® armorer.

### Assembly Instructions

1. Slide the spring over the tube and gently press or tap the retainer button in place using a small wooden or ball-peen hammer.

**Do Not apply excess force to place the retainer.**

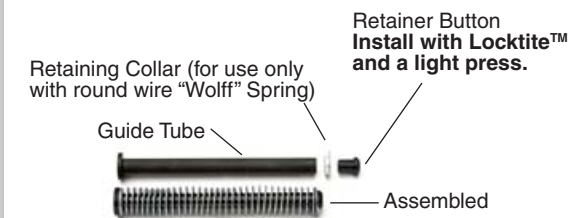


## ARO-SITE™ - Rear Sight

### Rear Sight Assembly Instructions

1. Drift off the old sight using a hammer and punch or sight pusher tool. Take care not to damage slide.
2. Loosen hex-head clamping screws with the allen wrench provided with your Aro-Site™. Slide the sight into the dovetail groove.
3. Center the Aro-Site™ and tighten clamping screws using the short end of the allen wrench as a handle. Do not over tighten the clamping screws.


4. To adjust the Aro-Site™, slightly loosen clamping screws and apply slight pressure in the direction of desired correction.
5. Once windage adjustment is correct, apply thread-lock to screws one at a time to avoid changing windage. Retighten clamping screws.

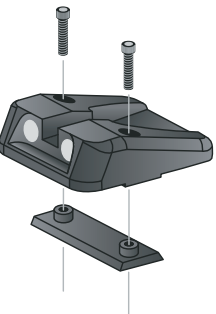

## ARO-SITE™ - Front Sight

### Front Sight Assembly Instructions

1. Remove slide, barrel and spring assembly from receiver following the instructions in your Glock® owner's manual.
2. Remove the barrel from the slide to expose the inside of the slide and the front site mounting pin.

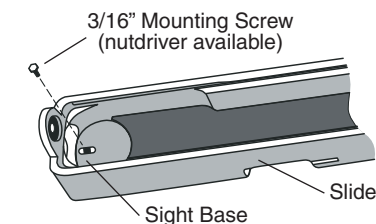

3. With a punch or similar tool, carefully push out the front sight.
4. Remove the attachment screw from the Aro-Site and apply a small amount of thread-lock to the threads of the sight screw.
5. Install the Aro-Site on the slide and tighten the screw. Do not apply excessive torque to the screw as this may twist the head off the shaft.
6. Reassemble the gun as instructed in your Glock® owner's manual.

## SURE-TOUCH™ Magazine Release

**Sure-Touch™ Magazine Release** gives instant response (right or left hand). It drops the empty magazine free and comes in black or chrome finish. **Sure-Touch™ Magazine Release must be installed by an Aro-Tek qualified gunsmith or by Aro-Tek.**

Aro-Tek will provide any qualified gunsmith with installation instructions at the request of the purchaser.



### WARNING

Do Not attempt installation of the Sure-Touch™ Magazine Release. (Does not apply to drop-in part)

## ARO-TEK™ Guide Rod with Removable Tip


### Parts List:

- Titanium or Stainless-Steel Guide Rod (2-56 internal threaded end)
- 2-56 Socket Cap Screw (Allen Screw)
- Spring Retainer (Black)
- Wolff Spring Retainer (Aluminum - For round wire springs only. Not required for stock Glock® spring.)
- 5/64" Allen wrench.

### Assembly Instructions

1. Remove factory spring by cutting plastic guide rod or remove plastic guide tub tip by pushing a wire or small punch through the hole in the rear of the rod. (best done inside of an old sock to capture all the parts)

2. Put the screw on the end of Allen wrench, install the spring retainer on the screw with the cup end toward the screw head. Apply a small amount of thread-lock on the threads to prevent the screw from backing out.
3. Stand the guide rod on a table with the spring installed. Compress the spring below the threaded end of the guide rod. Install the screw and spring retainer into the threaded end of the guide rod and tighten the screw.

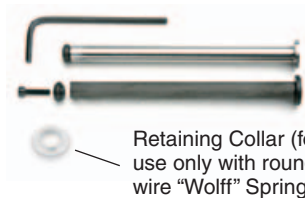

## ARO-TEK™ -Trigger Kit

### The Ultimate Competition Trigger Kit for Glock® Pistols

- Increases accuracy
- These are factory parts that have been mirror polished & diamond plated for a smooth pull and crisp break.



### WARNING

This product must only be installed by a certified Glock® Armorer who will perform the proper safety and function checks. Do not attempt to install these parts yourself.

## Drop-In Magazine Release

### Magazine Catch Removal Instructions

1. Use a screwdriver to push the magazine catch spring out of the magazine catch groove: Start with the screwdriver to the left of the magazine catch spring (figure 1). Push the spring to the right, then pry it out of the groove located on the bottom of the magazine catch.



Available Chrome or Black

2. Remove the magazine catch from the right side of the receiver (figure 2).

Figure 1


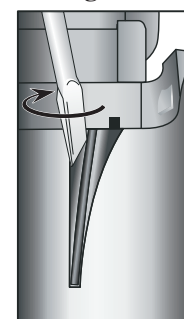 


Figure 2

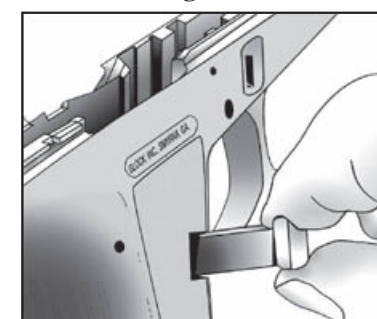 

### Aro-Tek, Ltd.

PO Box 14937  
Tumwater, WA 98511-4937  
**888.827.6835**  
fax 360.350.0185  
arotek@arotek.com  
**www.arotek.com**